




## Battery powered cablecutter

„AS-52ACSR“  
Art. 216436

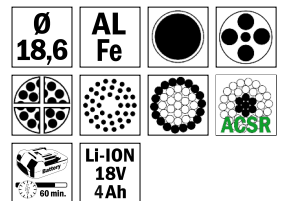

Video 216436




# 1. Technical data

Area of application:	Separating copper and aluminium cables
	<b>Suitable ACSR aluminum steel cables.</b>
Safety:	Working Safely with safety lever. The model Art. 216436 does not protect the operator when working on cables that carry power.
Garantie:	2 year guarantee if used for the purpose it is intended.

# 2. Area of work

Cutting range:	Ø up to 18,6 mm Al/Fe
Battery charging time in minutes:	60 min.
Battery type:	18 V, 4 Ah

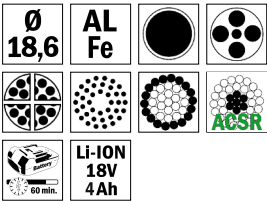

### 3. Short description

#### Preparation:

Before starting up the tool, always read the operating instructions.

All current-carrying elements in the area you are working in should be disconnected.

Otherwise the protective procedures for working in the vicinity of components under current must be implemented. (DIN EN 50110)

Do not use the tool if you are tired or under the influence of medication, drugs or alcohol.

Take into account the valid accident prevention and safety regulations and use the tool exclusively for the purpose for which it is intended.

Only electro-technically trained persons over 16 years of age may process connecting materials using the tool.

The operating instructions must always be carried with the tool.

The instructions must have been read and understood by the user.

The operator must ensure that this is the case.



#### Handling:

- The device has a manual return that brings the piston back to the starting point when the maximum cutting force (separation of the cable) has been achieved.
- Particularly excellent circular cut
- Use under the harshest conditions possible - robust construction.

**haupa®**

**...convincing solutions**

#### **4. Notes regarding correct use**

Before you start work, all active, thus current-carrying elements in the area around the assembler must be switched to without power. If this is not possible, protective procedures for working in the vicinity of components under current must be implemented. The charge status of the battery should be checked before you start work.

## 5. Removing and inserting the battery

Hold the tool firmly and press the battery release button to remove the battery.

### ATTENTION:

Never short-circuit the battery.

### Inserting the battery

Insert the battery until it clicks into place. Make sure the poles are facing the right way.



### Charging

Before using the tool, charge the battery as follows: Connect the cable of the charger to a socket (AC).

### Inserting the battery into the charger

Insert the battery firmly, as shown in here until it touches the bottom of the charging compartment.

### ATTENTION:

If the battery is inserted incorrectly, it will not only not be charged, it may also damage the charger (e.g. by bending the terminals/short-circuiting).

### Charging

When you insert a battery into the charger, the battery is charged and the charging light.

When the battery is fully charged, the charging indicator shows 100% and a beep. Remove the battery immediately and disconnect the charger from the mains.



### Attention!

Please remove the battery during transport and after usage – because of avoiding deep discharge!

**haupa®**

**...convincing solutions**

# Li-ion Battery & Charger Instruction



## Li-ion Batterie

Voltage	18 V
Weight	0,380 kg
Length	120 mm
Width	70 mm
Height	80 mm
Capacity(Ah)	4Ah
Charge time	60 min.

## Charge(for Li-ion)






Voltage	110V / 220V
Weight	0,430 kg
Length	175 mm
Witdh	90 mm
Height	80 mm








**Permitted only on stabilized power sources! Charging only for HAUPA batteries!**

## Li-Ion Battery Manual Instruction

### Panel Description:

1. Connect power shows  ,
2. Fully charged, it shows  and comes beeping every 3 seconds.
3. Unusual working == Too low voltage shows  and comes a beeping every second.
4. Unusual working == Unusual temperature shows  , and comes a beeping every second.
5. The voltage is not rising after 10 minus charged. The battery is charged incompletely. The battery is faulty, showing  and coming beeping every 2 seconds by a second.

### Specification:

1. The input power is external power DC24V 3A.
2. The charge voltage is 24V 2.5A.
3. When plug in the power, the panel shows  and comes a beeping.
4. Uninstall the battery, the panel shows  and twinkles every second.
5. Detect the battery voltage first and shows battery capacity rate when install battery.
6. When battery charged completed, the panel shows  and comes beeping every 3 seconds.
7. When the voltage is too low, the panel shows  and comes a beeping every second.
8. When the temperature is too high, the panel shows  and comes a beeping every second.
9. The maximum charge time is 120 minutes. After 120 minutes, the charger will stop charging regardless the battery is charged completed.
10. The full charged voltage for 18V Li-Ion battery is (5\*4.3=21.5v); the voltage for 14.4V Li-Ion is (4\*4.3=v17.2v) (reference valve). The battery is coming with a protective plate which will stop charging automatically when charged completely.
11. The lowest battery voltage for 18V Li-Ion battery is (2.9\*5=14.5v); and the 14.4v is (2.9\*4=11.6v).
12. It will stop charge when the battery temperature is higher than 65 degree centigrade.
13. The usual temperature for battery is between -20° to 65° centigrade when a fan is applied. The fan working voltage is 12V.
14. Under 90% battery capacity will carry in adding per 5%. Over 90% battery capacity will carry in adding per 1%.

## **6. Care and maintenance**

### **Cleaning**

- Careful cleaning of the tool, in particular, the moving parts contributes towards a longer useful life. Remember that dust, sand, environmental influences, in particular a high salt index, and dirt in general are extremely damaging to hydraulic tools.
- Particular care should be taken when cleaning the pump drive piston and the piston. The tiniest of contaminations may scratch the walls of the cylinder and damage the leak-proof seals. For the correct cleaning of the piston, we recommend extending the piston and then cleaning it with a high-quality, non-corrosive solution.

### **Power switch**

Check to see whether the switch on the machine automatically pops out again when you release it.

### **Storage**

To prevent damage to the tool as a result of bumps, dust etc. you should if possible store the tools in the original packaging.

### **Guarantee:**

2 year guarantee when used for the purpose it is intended when the annual maintenance intervals are maintained by an authorised HAUPA service centre. We reserve the right to rework the product.

### **Faults:**

Loss of oil:

Send to the HAUPA service centre. Do not open!

### **Disposal:**

...in accordance with the scope of validity of the European WEEE (2002/96/EU) and RoHS directives (2002/95/EU). Batteries must be disposed off separating according to the battery directive.

WITH EVERY REPLACEMENT PART ORDER, INCLUDE THE FOLLOWING INFORMATION:

- 1) Article number.
- 2) Article description.
- 3) Reference to the operating instructions and/or date.
- 4) Tool type.
- 5) Serial number of the tool.

The guarantee is voided if you use parts that are not original replacement parts from HAUPA.