



Electro-hydraulic crimping tools

"SD300-6" / "SD400-6"

Art. 216663 / 216667













1. Technical data

Area of application: For the creation of an electrical connection by means of compression

Scope of delivery: 1 crimping tool, 1 charger, 1 battery, 1 carry loop, in plastic case,

without pressing dies.

Pressing force: 60 kN

Oil type: ISO class viscosity 15

Safety: The tool is fitted with a safety value that has been set at the factory. Structure: The working head can be rotated by 180° to make it easier to adapt to

the operation to be carried out. The model Art. 216801 does not protect

the operator when working on cables that carry power.

Guarantee: 2 year guarantee if used for the purpose it is intended.

2. Area of work

· Pressing force: 60 kN

Working pressure in bar: 700

· Pressing width: thorn

• Crimping range cable lugs: 216663: Cu 16-300 / 216667: Cu 25-400

Crimping range connectors: 216663: Cu 16-120 / 216667: Cu 25-400


• Pressing time, battery-operated in sec.: 6-12

• Battery charging time in min.: 60

• Battery type: Li-Ion, 18 V, 2 Ah

• Weight in kg: 216663: 2,4 / 216667: 2,4

• Weight set in kg: 216663: 7,9 / 216667: 7,9

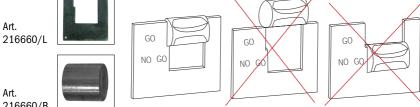









Extent of supply:

10 x Test pin 216660/L

1 x Template for four mandrel Pressing 216660/L

Preparation:

Before starting up the tool, read the operating instructions first.

All current-carrying elements in the area you are working in should be disconnected.

Otherwise the protective procedures for working in the vicinity of components under current must be implemented. (DIN EN 50110)

Do not use the tool if you are tired or under the influence of medication, drugs or alcohol. Take into account the valid accident prevention and safety regulations and use the tool exclusively for the purpose for which it is intended.

Only electro-technically trained persons over 16 years of age may process connecting materials using the tool.


The operating instructions must always be carried with the tool.

The instructions must have been read and understood by the user.

The operator must ensure that this is the case.

Start:

- The device has a manual return that brings the piston back to the starting point when the maximum pressing force has been achieved.
- The pressing head can be infinitely rotated by 360° about the longitudinal axis. This
 enables mounting even in difficult to access locations.
- The pressing head has centring pins which ensure automatic centring of the connection material in the pressing head.

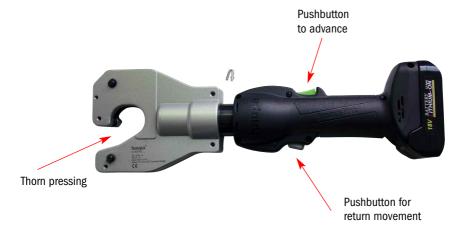



3. Notes regarding correct use

Before you start work, all active, thus current-carrying elements in the area around the assembler must be switched to without power. If this is not possible, protective procedures for working in the vicinity of components under current must be implemented. The charge status of the battery should be checked before you start work

3.1. Operating the device

First, the bolt is removed and the bar opened. The connection material is place centrally between the 4 pressing spikes.

Caution!

If the pressing is not centred, this may result in damage to the pressing head! Then the pressing head is fully closed up again. The actuation of the operating switch triggers the pressing procedure which is characterised by the meeting of the pressing spikes. A pressing procedure is completed when the pressing spikes have been joined and the device switches over to idle.

The return of the piston is carried out manually after the maximum operating excess pressure is reached. Then a further pressing procedure can be carried out or the bar can be opened and the connection material removed from the pressing head.

Before reaching into the pressing head, remove the battery to ensure that the device is not activated accidentally.

Pressing the reset button brings the pressing spikes back to the starting position in the event of faults or an emergency.

The pressing procedure can be interrupted at any time by releasing the operating switch.

3.2. Explanation of the areas of application

The pressing tool has pressing spikes that use force to compress copper and aluminium connection materials without the need to change tools.

4. Removing and inserting the battery

Hold the tool firmly and press the battery release button to remove the battery.

ATTENTION:

Never short-circuit the battery.

Inserting the battery

Insert the battery until it clicks into place. Make sure the poles are facing the right way



Charging

Before using the tool, charge the battery as follows: Connect the cable of the charger to a socket (AC).

Inserting the battery into the charger

Insert the battery firmly, as shown in here until it touches the bottom of the charging compartment.

ATTENTION:

If the battery is inserted incorrectly, it will not only not be charged, it may also damage the charger (e.g. by bending the terminals/short-circuiting).

Charging

When you insert a battery into the charger, the battery is charged and the charging light.

When the battery is fully charged, the charging indicator shows 100% and a beep. Remove the battery immediately and disconnect the charger from the mains.



Attention!

Please remove the battery during transport and after usage – because of avoiding deep discharge!



Li-ion Battery & Charger Instruction



Li-ion Batterie

Voltage	18 V
Weight	0,380 kg
Length	120 mm
Width	70 mm
Height	50 mm
Capacity(Ah)	2 Ah
Charge time	60 min.



Voltage	110V / 220V
Weight	0,430 kg
Length	175 mm
Witdh	90 mm
Height	80 mm



Permitted only on stabilized power sources! Charging only for HAUPA batteries!

Li-Ion Battery Manual Instruction

Panel Description:

1.	Connect power shows 5EF
2.	Fully charged, it shows \[\begin{align*} \Boxed{\text{D}} \\ \alpha \text{ and comes beeping every 3 seconds.} \]
3.	Unusual working Too low voltage shows LDD and comes a beeping every second.
4.	Unusual workling Unusual temperature shows $\Box\Box\Box$, and comes a beeping every second.
5.	The voltage is not rising after 10 minus charged. The battery is charged incompletely. The battery is faulty,
	showing DDT and coming beeping every 2 seconds by a second.

Specification:

- 1. The input power is external power DC24V 3A.
- 2. The charge voltage is 24V 2.5A.
- 3. When plug in the power, the panel shows $\Box\Box\Box$ and comes a beeping.
- 4. Uninstall the battery, the panel shows SEE and twinkles every second.
- 5. Detect the battery voltage first and shows battery capacity rate when install battery.
- 6. When battery charged completed, the panel shows DDD and comes beeping every 3 seconds.
- 7. When the voltage is too low, the panel shows and coms a beeping every second.
- 8. When the temperature is too high, the panel shows and comes a beeping every second.
- The maximum charge time is 70 minutes. After 70 minutes, the charger will stop charging regardless the battery
 is charged completed.
- The full charged voltage for 18V Li-lon battery is (5*4.3~21.5v); the voltage for 14.4V Li-lon
 is (4*4.3~v17.2v) (reference valve). The battery is coming with a protective plate which will stop charging automatically
 when charged completely.
- 11. The lowest battery voltage for 18V Li-Ion battery is (2.9*5=14.5v); and the 14.4v is (2.9*4=11.6v).
- 12. It will stop charge when the battery temperature is higher than 65 degree centigrade.
- 13. The usual temperature for battery is between -20° to 65° centigrade when a fan is applied. The fan working voltage is 12V.
- 14. Under 90% battery capacity will carry in adding per 5%. Over 90% battery capacity will carry in adding per 1%.



5. Care and maintenance

Cleaning

 Careful cleaning of the tool, in particular, the moving parts contributes towards a longer useful life. Remember that dust, sand, environmental influences, in particular a high salt index, and dirt in general are extremely damaging to hydraulic tools.

Power switch

Check to see whether the switch on the machine automatically pops out again when you release it.

Storage

To prevent damage to the tool as a result of bumps, dust etc. you should if possible store the tools in the original packaging.

Guarantee:

2 year guarantee when used for the purpose it is intended when the annual maintenance intervals are maintained by an authorised HAUPA service centre. We reserve the right to rework the product.

Faults:

Loss of oil:

Send to the HAUPA service centre. Do not open!


Disposal:

...in accordance with the scope of validity of the European WEEE (2002/96/EU) and RoHS directives (2002/95/EU). Batteries must be disposed off separating according to the battery directive.

WITH EVERY REPLACEMENT PART ORDER, INCLUDE THE FOLLOWING INFORMATION:

- 1) Article number.
- 2) Article description.
- 3) Reference to the operating instructions and/or date.
- 4) Tool type.
- 5) Serial number of the tool.


The guarantee is voided if you use parts that are not original replacement parts from HAUPA.

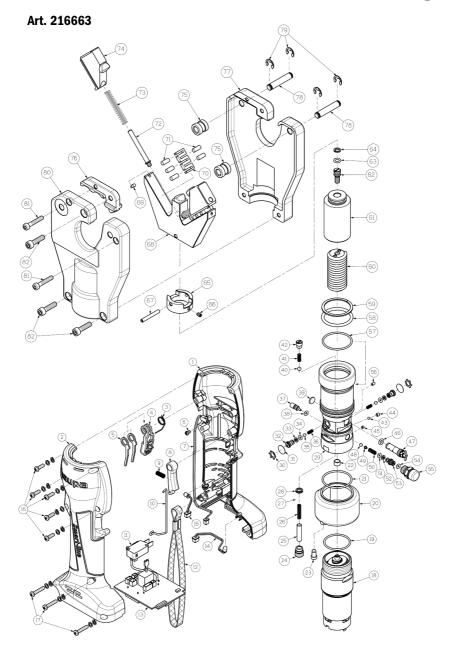



... convincing solutions

Art. 216667

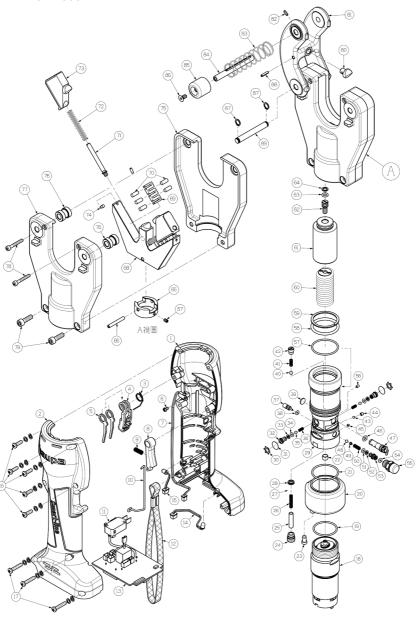



EC declaration of conformity **HAUPA** factory certificate

Remscheid, 23.03.2016

Product:

Battery hydraulic crimping tool

Product range:

Around the cable

Art. no.:

215770; 215770/M; 215881; 215881/M; 216800; 216801; 216801/M; 216601; 216622; 216503; 216663; 216663/M; 216667; 216667/M; 216669; 216669/M

Note:

A correct connection according VDE 0220 Part 2 is only guaranteed if the user work with Haupa cable lugs and also

adequate HAUPA pressing tools.

The tools are not isolated and it is forbidden to work under tension.

Herewith we declare that the above mentioned tools are manufactured according the following guidelines:

CE guidelines 98/37/EEC, 89/336/EEC

Jens-Ole Paas

Qualitätsmanagement

Jocnen Husii Produktmanagement

